


FRONT FENDER Cont'd

SHEET METAL Cont'd

Add to Edge Fender R/L .5
R/I Fender Assy R/L #2.2


#Includes R&I/R&R Combination Lamp & Front & Rear Fender Liners

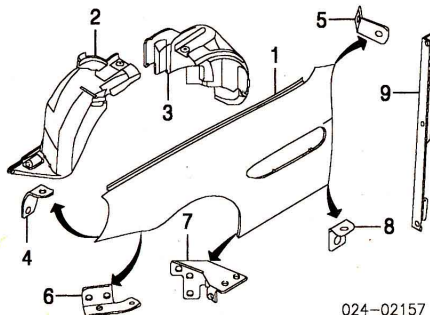

1 Fender	R/L 41 35 7 011 670-69	#2.5	440.00
#Includes R&I/R&R Combination Lamp & Front & Rear Fender Liners			
2 Liner, Front	R/L 51 71 8 234 136-5	#.3	209.00
3 Liner, Rear	R/L 51 71 8 257 086-5	#.3	125.00
#R&R One Side Complete .4			
4 Bracket, Front Fender	R/L 41 35 7 011 650-49		34.25
5 Bracket, Upper Rear	R/L 41 35 7 011 644-3		23.50
6 Bracket, Frt Wheel Opng	R/L 41 35 7 011 646-5		21.50
7 Bracket, Rear Wheel Opng	R/L 41 35 7 011 648-7		42.50
8 Bracket, Lower Rear	R/L 41 35 7 011 663		15.10
9 Flange, Rear Fender	R/L 41 35 7 011 666-5		32.90

EXTERIOR TRIM

Refinish Side Vent Trim R/L .3
R/I Side Vent Trim R/L .3

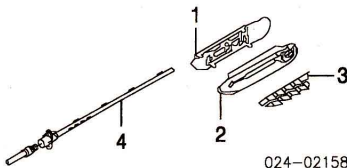

1 Bracket, Side Vent	R/L 51 13 8 263 222-1	#.2	48.25
#w/Rear Liner Removed, Included in R&R Fender			
2 Trim, Side Vent (P)	R/L 51 13 8 231 940-39	.3	170.00
(P) Paint to Match			
3 Vent, Side	R/L 51 13 8 269 966-5	#.1	37.00
#w/Side Repeater Lamp Removed			
4 Lamp, Side Repeater-See Front Lamps Section			

UNDERHOOD DIMENSIONS


Information not available at time of publication.

FRONT INNER STRUCTURE

Use Procedure Explanations 8 and 28 with the following text.

FRONT


Refinish Front Panel Assy 1.5
Refinish Strut R/L .5

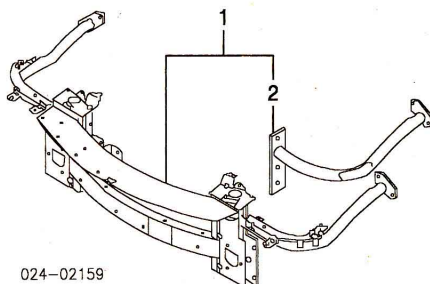

1 Panel Assy, Front	51 71 7 006 305	#6.5	765.00
#Includes R&I Front Bumper, R&I/R&R Combination Lamps, Impact Absorbers, Hood Latches, Horns, Hood Seal, Struts & Disconnect & Connect Hood Release Cable & Wiring as Necessary			
2 Strut	R/L 41 11 7 006 088-7	#.5	235.00
#Included w/Front Panel Assy			
#w/Necessary Bolted Parts & Assemblies Removed			


SIDE

Refinish Front Apron Assy R/L 1.5
Refinish Front Rail R/L 1.0

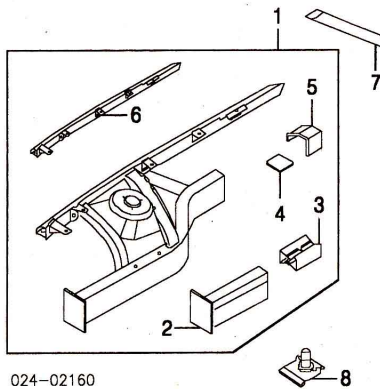


1 Apron Assy, Front (a)	R/L 41 11 7 006 084-3	s #7.5	1435.00
(a) Additional Parts &/or Dealer Contact Required			
2 Rail, Front	R/L 41 11 7 006 086-5	s #4.5	209.00
#w/Front Support Panel Removed Deduct 1.0			
3 Support, Rail (2/Side)	R/L 41 11 7 006 154		32.95
4 Cap, Support	R/L 41 11 7 006 303		48.75
5 Base, Support	R/L 41 11 7 006 304		25.50
6 Strut, Wheelhouse	R/L 41 11 7 006 832-1		289.00
#Included w/Front Apron Assy			
7 Support, Rear Apron	R/L 41 11 7 006 108-7		60.25
8 Pin, Ground	R/L 41 11 8 386 006		13.10
	R/L 41 11 8 386 009		13.10

FRONT BRACKETS

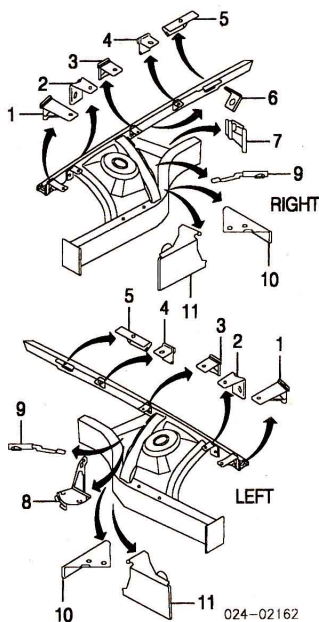

1 Bracket, No. 1	R/L 41 11 7 006 089		9.40
2 Bracket, No. 2	R/L 41 11 7 036 180		15.20
3 Bracket, No. 3	R/L 41 11 7 006 090		9.40
4 Bracket, No. 4	R/L 41 11 7 006 101		9.40
5 Bracket, No. 5	R/L 41 11 7 006 103		18.80
6 Bracket, Washer Tank	R 41 11 7 006 210		13.00
7 Bracket, Plug	R 41 14 7 006 292		21.50
8 Bracket, ABS Hydraulic Unit	L 41 11 7 006 102		51.75
9 Reinf, Upper Eng Support	R/L 41 11 7 006 308-7		22.75
10 Reinf, Lower Eng Support	R/L 41 12 7 006 282-1		42.35
11 Cover, Eng Bearing	R/L 41 11 7 006 082-1		37.65


SUB-FRAME

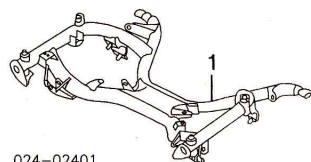

1 Sub-Frame, Suspension	31 10 1 097 139	m #4.0	1200.00
-------------------------	-----------------	--------	---------

#Includes R&I Suspension Complete, Not Included in O/H,
Deduct 1.0 for Each Knuckle or Suspension Assy Removed

ELECTRICAL COMPONENTS

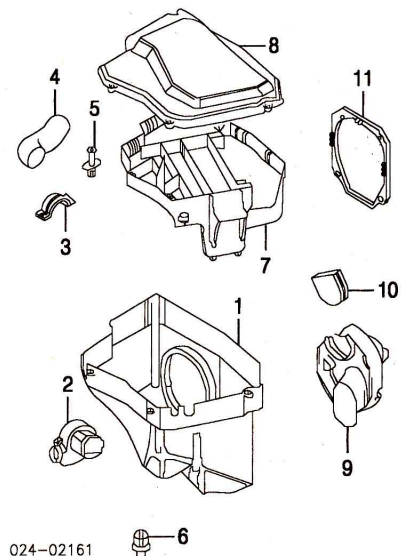

1 Box, Fuse	12 90 1 706 388	m 1.2	33.00
2 Motor, Blower	12 90 1 438 062	.3	117.00
3 Clamp, Blower Motor	12 90 1 744 599		.50
4 Hose, Blower Motor	12 90 1 744 376		8.40
5 Rivet, Clamp (2)	51 13 1 885 399		.37
6 Grommet, Fuse Box	12 90 1 744 480		1.15
7 Tray, Fuse Box	12 90 1 712 109	.6	9.50
8 Cover, Fuse Box	12 90 7 831 773	.1	20.25
9 Cover, Fuse Box Side	12 90 1 740 708		0.00
10 Plug, Cover	12 90 1 435 588		1.00
11 Seal, Fuse Box	12 90 1 740 709		6.10

AIR BAG SYSTEM


NOTE 1: R&R Does Not include disable and enable or diagnose Air Bag System.

NOTE 2: Refer to Procedural Explanation 30 for Supplemental Restraint/Air Bag System Component Inspection and Replacement Information.

NOTE 3: For Air Bag System Service procedures, refer to Manufacturer's Service Repair Manual or Mitchell's Air Bag Service and Repair Manual.

FRONT

Disable & Enable Air Bag System m .3

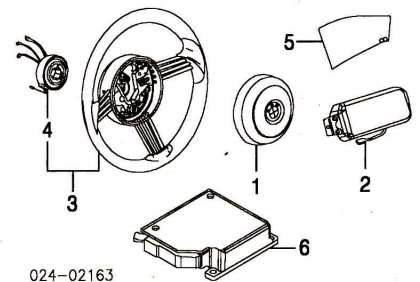

1 Module, Driver Air Bag			
Black	32 34 6 756 002	m .6	690.00
Silver	32 34 6 755 997	m .6	690.00
Stratus Gray	32 34 6 755 999	m .6	690.00
Blue Topaz	32 34 6 755 998	m .6	690.00
2 Module, Passenger Air Bag			
2000			
To 9-00	72 12 8 234 099	m .6	760.00
From 9-00	72 12 7 048 961	m .6	762.50
2001-03	72 12 7 048 961	m .6	762.50
3 Wheel Assy, Steering-See Steering Wheel/Column Section			
4 Clockspring	32 34 6 751 290	m .9	129.00
#Included w/Steering Wheel Assy			
5 Cover, Passenger Air Bag Module			
Black	51 45 8 242 317	m	155.00
Silver	51 45 7 004 379	m	155.00
Stratus Gray	51 45 7 000 593	m	207.00
Blue Topaz	51 45 7 000 591	m	207.00
Mat, Air Bag Sensor			
Passenger Side	65 77 7 005 824	m	161.00
6 Control Unit, Air Bag	65 77 6 900 727	m	276.00

SIDE

Disable & Enable Air Bag System m .3